


Tilslutning af W&T 61210 / 65210 til Nox enheder

Kommunikationen skal sættes til 2-wire RS485

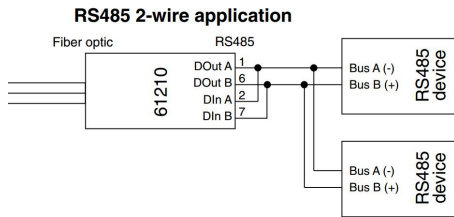

Inde i enheden er en dip-sw. Den skal sættes
til RS485, 2-wire. On on off on off
Dip-sw 6 og 7 skal stå i off

Operating mode	SW1	SW2	SW3	SW4	SW5
RS422, RS485, 4-wire bus master	OFF	OFF	OFF	ON	OFF
RS485, 4-wire / 2-wire with echo	OFF	ON	OFF	ON	OFF
RS485, 2-wire bus systems w/o echo	ON	ON	OFF	ON	OFF

